
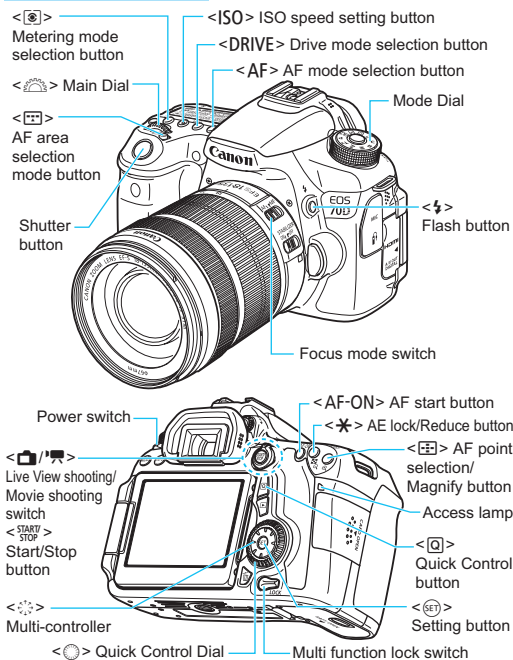



- | | |
|-----------------------------------|--|
| 7 | Select AF area selection mode |
| 8 | AF area selection method |
| 9 | Orientation linked AF point |
| 10 | Manual AF point selection pattern |
| 11 | AF point display during focus |
| 12 | VF display illumination |
| 13 | AF Microadjustment |
| C.Fn III: Operation/Others | |
| 1 | Dial direction during Tv/Av |
| 2 | Multi function lock |
| 3 | Warnings  in viewfinder |
| 4 | Custom Controls |

Shooting Operation


Nomenclature




LCD Panel

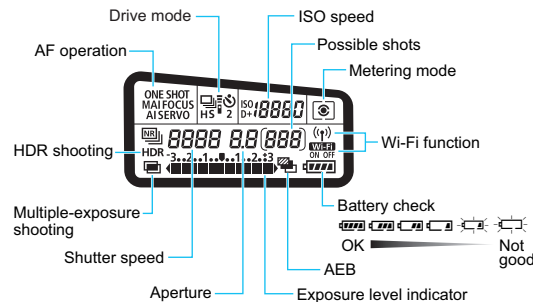

Viewfinder Information

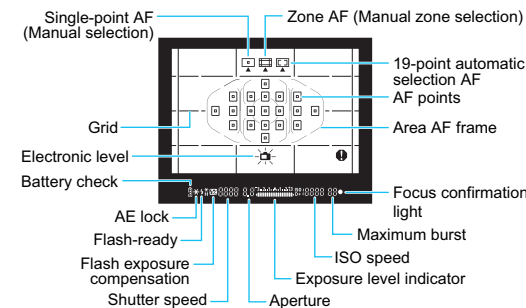

Basic Zone Modes

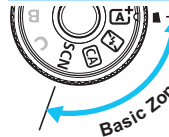

All the settings necessary for shooting are set automatically. You just press the shutter button, and the camera does the rest.


- Scene Intelligent Auto
- Flash Off
- Creative Auto
- SCN Special scene
 - Portrait
 - Landscape
 - Close-up
 - Sports
- Night Portrait
- Handheld Night Scene
- HDR Backlight Control

Using the Built-in Flash

Basic Zone Modes


If necessary, the built-in flash will be fired automatically in low-light or backlit conditions (except in the <P> <S> <A> <M> modes).

Creative Zone Modes

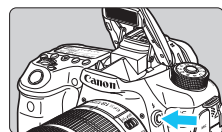

- Press the <Flash> button to raise the built-in flash, then shoot.

Creative Zone Modes

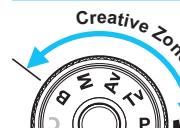


You can change the camera settings as desired to shoot in various ways.

* Set the <LOCK> switch downward (Multi function lock released).

P: Program AE


- Set the Mode Dial to <P>.
- When you focus a subject, camera automatically sets the shutter speed and aperture.

Tv: Shutter-priority AE

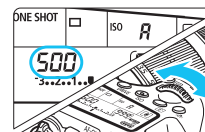

- Set the Mode Dial to <Tv>.
- Turn the <Shutter speed> dial to set the desired shutter speed, then focus the subject.
- The aperture will be set automatically.
- If the aperture display blinks, turn the <Aperture> dial until it stops blinking.

Av: Aperture-priority AE

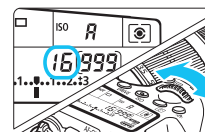


- Set the Mode Dial to <Av>.
- Turn the <Aperture> dial to set the desired aperture, then focus the subject.
- The shutter speed will be set automatically.
- If the shutter speed display blinks, turn the <Shutter speed> dial until it stops blinking.


ISO: ISO Speed*




- Press the <ISO> button, turn the <ISO> or <Shutter speed> dial.
- ISO 100 to ISO 12800 can be set in 1/3-stop increments.
- When "A" is selected, the ISO speed is set automatically. When you press the shutter button halfway, the ISO speed setting is displayed.

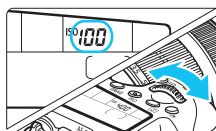


Drive Mode

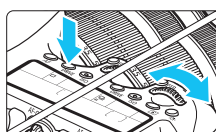

 
- Press the <DRIVE> button, turn the <Shutter speed> or <ISO> dial.
- Single shooting
- High-speed continuous shooting
- Low-speed continuous shooting
- Silent single shooting
- Silent continuous shooting
- 10-sec. self-timer/remote control
- 2-sec. self-timer/remote control



AF: AF Operation*

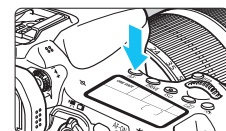


- Set the lens focus mode switch to <AF>.
- Press the <AF> button, then turn the <Shutter speed> or <ISO> dial.

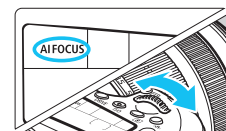


- ONE SHOT (One-Shot AF): For still subjects
- AI FOCUS (AI Focus AF): Switches the AF operation automatically
- AI SERVO (AI Servo AF): For moving subjects


AF Point Selection*

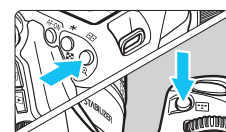

- Press the <AF-ON> or <AF-ON> button.
- The AF point selection will change in the direction you tilt the <AF-ON>. If you press <SET> straight down, the center AF point (or center zone) will be selected.
- You can also select a horizontal AF point by turning the <Shutter speed> dial and select a vertical AF point by turning the <ISO> dial.

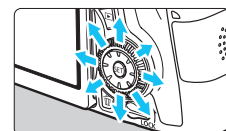


AF Area Selection Mode*

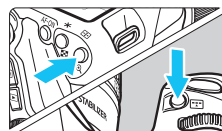


- Press the <AF-ON> or <AF-ON> button.
- Look through the viewfinder and press the <AF-ON> button.
- Each time you press the <AF-ON> button, the AF area selection mode changes.

Live View Shooting

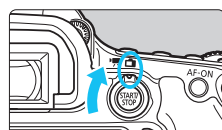

- Set the switch to <Live View>.
- Press the <START/STOP> button and the image will appear on the LCD monitor.

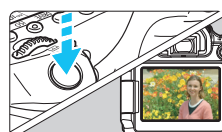


- Press the shutter button halfway to focus, then press it completely to take the picture.
- Press the <START/STOP> button to stop the Live View shooting.

Number of Possible Shots (Live View Shooting)

Temperature	No Flash	50% Flash Use
At 23°C / 73°F	Approx. 230 shots	Approx. 210 shots


Shooting Movies

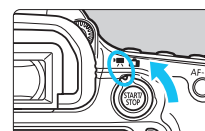

- Set the switch to <Movie>.
- The image will appear on the LCD monitor.



- Press the <START/STOP> button to start shooting a movie. To stop movie shooting, press the <START/STOP> button again.
- To shoot still photos, press the shutter button completely.

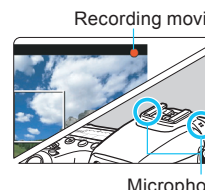

- When the shooting mode is <M>, you can shoot movies with manual exposure.
- You can set movie shooting settings with the menu options under the [Movie 1] or [Movie 2] tab.